


INSTRUCTIONS FOR
Moulinex Regal
**Electric
Kettle**

HOUSEHOLD USE ONLY

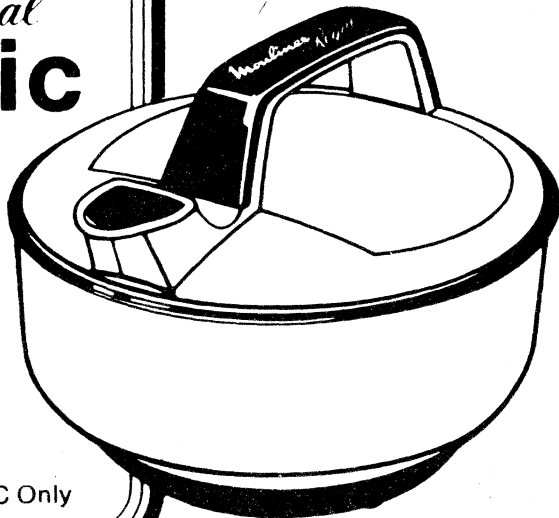

1500 Watts 120 Volts AC Only



Model No. V605

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handle.
- To protect against risk of fire, electrical shock, and personal injury, do not immerse cord, plug, or base of this appliance in water or other liquid.
- Do not use an extension cord whose electrical rating is less than 13 amps.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or if the appliance has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use for other than the intended use of heating water.
- Always operate this appliance on a dry, level surface.
- Do not operate in the presence of explosive and/or flammable fumes.
- Unplug kettle by grasping plug and pulling it from outlet. NEVER YANK ON CORD.

SAVE THESE INSTRUCTIONS

ELECTRIC KETTLE DESIGNED TO BOIL WATER ONLY

- Handle remains cool to the touch for safe handling.
- Base is heat-resistant and Kettle can be used on tabletop or counter.
- Boils 2 quarts (64 ounces) tap water in approximately 8 minutes.

GENERAL INSTRUCTIONS

- 1 Unpack Kettle and inspect for any shipping damage. Record purchase date on back of instruction book.
- 2 Before first use, clean the Kettle to remove any trace of manufacturing oils. Add 2 quarts cold water, plug into standard electrical outlet and bring to boil. Boil water for approximately 10 minutes; empty and repeat process.
- 3 To use, fill Kettle with 2 quarts cold water (a level just below pouring spout). Do not overfill and never heat less than two cups of water. Plug cord into outlet. Water will heat and boil until cord is unplugged.
- 4 To turn Kettle off after water boils, unplug cord. Always unplug cord from outlet before filling or pouring.

CARE AND CLEANING

1. The outside of the Kettle can be cleaned with a damp, sudsy cloth or sponge. Food spatters or stubborn spots can be cleaned with a mild liquid cleanser. Coarse scouring pads or strong cleansers can harm the finish. NEVER IMMERSE KETTLE IN WATER.
2. Prolong the life of your Electric Kettle and obtain maximum heating efficiency with an occasional "deliming." To remove mineral deposits from inside Kettle, pour 1 cup white vinegar and 4 cups of cold water into Kettle. Bring to boil and boil for five minutes. Unplug Kettle and let it stand one-half hour. Pour out vinegar solution. Fill Kettle with 2 quarts cold tap water and bring to boil. Unplug unit and empty. Frequency of use and type of water in your area determine how often this cleaning is necessary.

ONE YEAR LIMITED WARRANTY

Your new appliance is warranted by Moulinex Regal, Inc. to be free from defects in material and workmanship under normal use for one year from date of purchase. In the event of a malfunction or failure of this appliance, the purchaser should take the appliance or send it insured, packaged with sufficient protection, and postage and insurance prepaid to the authorized service center nearest you (see list), or to the address listed below. If the malfunction or failure is a result of defects covered by the warranty, Moulinex Regal will, at its option, repair the appliance or replace it with a new appliance, and return it to the purchaser, with charge only for transportation.

This warranty is limited to the original retail purchaser and is not transferable. The warranty does not cover damage due to accidents, abuse, tampering or misuse, nor does it cover damage resulting from service by persons other than Moulinex Regal.

MOULINEX REGAL'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF A DEFECTIVE APPLIANCE, WITH THE EXCEPTION OF DAMAGES RESULTING FROM MOULINEX REGAL'S FAILURE TO COMPLY WITH FEDERAL OR STATE WARRANTY LAW. MOULINEX REGAL SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER DIRECT OR INDIRECT.

THIS WARRANTY IS EXPRESSLY GRANTED IN LIEU OF ALL OTHER WARRANTIES EXCEPT IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE PERIOD OF THIS EXPRESS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

In the event you have any questions concerning the use and care of Moulinex Regal products or concerning service under this warranty, or other, please write:

MOULINEX REGAL, INC.
Consumer Service Department
2820 Crusader Circle
Virginia Beach, VA 23456 U.S.A.

Date of purchase _____

Printed in Canada